

F-Trim

When installing RELINE® on ceilings, F-Trim is used to cover the cap plate on top of the CONFORM® walls, as it provides a cleaner finish.

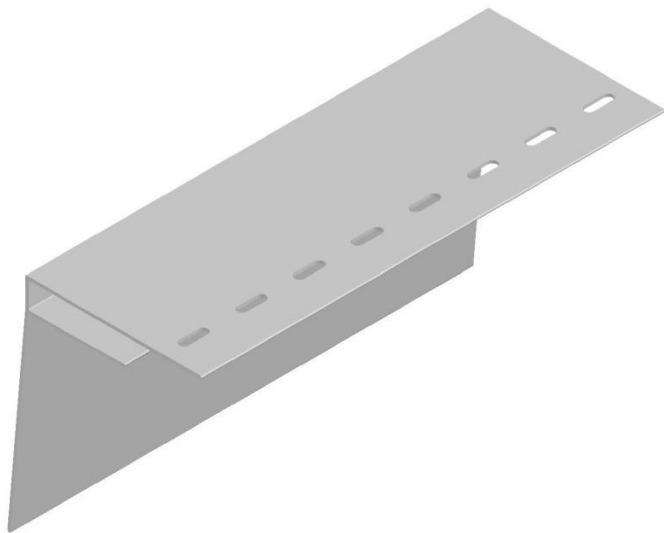


Figure 1 F-Trim (3" x 2 1/4")

F-Trim can also be used as an alternative to the J-Trim and the Multi-Use Trim for ceiling installations.

F-Trim at Ceiling

F-Trim is installed prior to placing RELINE® panels. Mechanically fasten at 24" maximum. Make sure to leave 1/8" for expansion at panel sides and 1/4" at ends. Refer to figure 2 for completed installation detail.

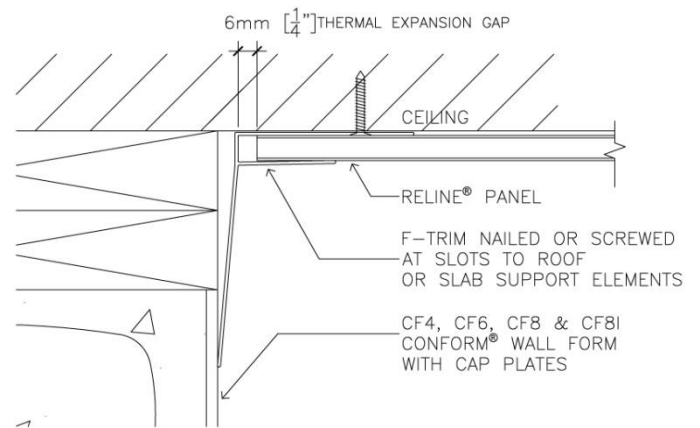


Figure 1 F-Trim Completed Installation