


### Cove Trim

The Cove Trim is used at the junction between two perpendicular RELINE® panels on walls or the ceiling and wall.

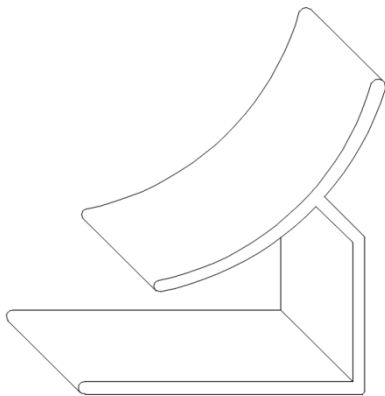

**Figure 1 Cove Trim (2 ½" x 2 ½")**


The Cove trim creates a smooth edge with a 25mm (1") radius rounded inside corner, between the RELINE® panels.

### Cove Trim Installation

Install Cove trim vertically when installed on walls and horizontally when installed at the ceiling. There are two ways to fasten Cove trim.

- Silicone
- Mechanical Fasteners ( Screws, nails )

Mitre corners as required. Provide a minimum ¼" clearance at ends and sides of panels ( Figure 2 ).

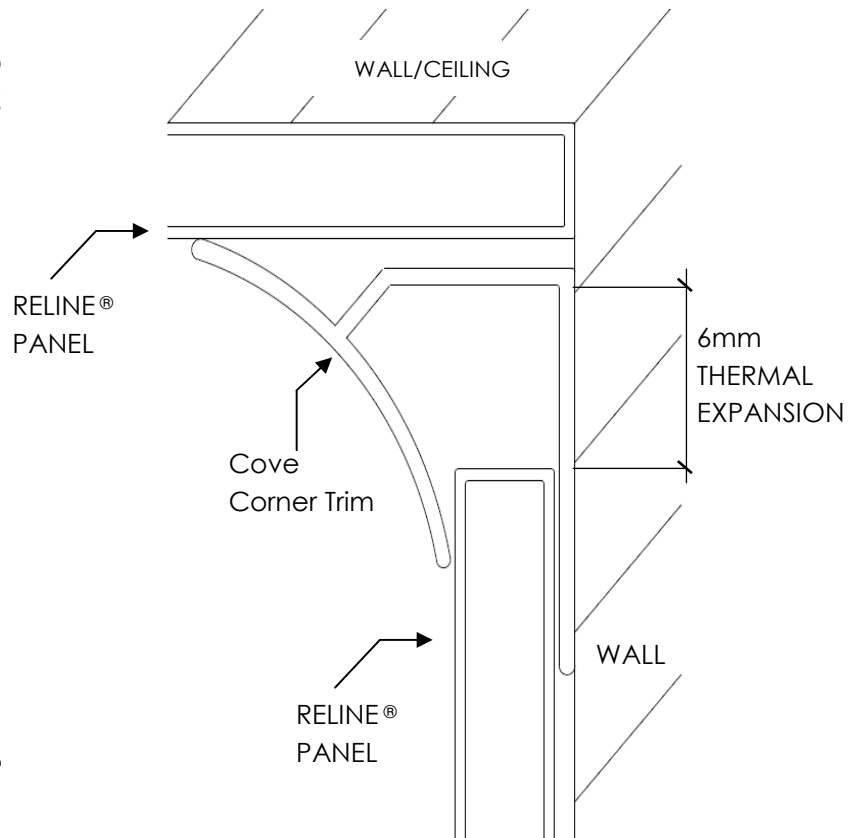

**Figure 2 Cove Trim**